

## Safety Information

### **WARNING: READ AND UNDERSTAND ALL INSTRUCTIONS.**

Failure to follow all instructions listed below, may result in **electric shock, fire and/or serious personal injury.**

### **WARNING:**

**ELECTRIC PRODUCT.** Keep away from children. As with all electrical products, precautions should be observed during handling and use to reduce the risk of electric shock. If the supply cord is damaged, it must be replaced **by the manufacturer, its service agent, or similarly qualified persons** to avoid a hazard.

**Adults Note:** Periodically examine this product for damage to the cord, housing or other parts that may result in **the risk of fire, electric shock, or injury.** If the product is damaged, do not use it.

**DANGER** – To prevent electric shock, do not immerse in water, wipe clean with damp cloth. Immersing this product can result in an electric shock.

---

**CAUTION:** Do not attempt to inflate this unit during unusually strong winds. If it becomes too windy for **safe operation, allow the unit to deflate and wait for safer** conditions.

---

## **IMPORTANT SAFETY INSTRUCTIONS**

WHEN USING ELECTRICAL PRODUCTS, BASIC PRECAUTIONS SHOULD ALWAYS BE FOLLOWED INCLUDING THE FOLLOWING:

### **READ AND FOLLOW ALL SAFETY INSTRUCTIONS.**

- This is an electrical product – not a toy! To avoid risk of fire, burns, personal injury, and electric shock, it should not be played with or placed where small children can reach it.
- Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GCFI) outlet. If one is not provided, contact a qualified electrician for proper installation.
- This seasonal use product is not intended for permanent installation or use.
- Do not mount or place near gas or electric heaters, **fireplaces, candles, or other similar sources of heat.**
- Do not secure product wiring with staples or nails or place on sharp hooks or nails.
- Do not let lamps rest on the supply cord or on any wire.

- Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- Do not use the product for other than its intended purpose.
- Do not hang ornaments or other objects from cord, wire, or light string.
- Do not close doors or windows on the product, or extension cords, as this may damage the wire insulation.
- Do not cover the product with a cloth, paper, or any material not part of the product when in use.
- Do not place the product against carpeting, furniture, or any other fabric when in use.
- Read and follow all instructions that are on the product or provided with the product.
- Use all included stakes and tethers to prevent outdoor inflatable from being impacted by wind.

## **SAVE THESE INSTRUCTIONS**

### **USE AND CARE INSTRUCTIONS**

1. When the product is placed on a live tree, the tree should be well maintained and fresh. Do not place on live trees in which the needles are brown or break off easily. Keep the tree holder filled with water.
2. If the product is placed on a tree, the tree should be well secured and stable.
3. Before using and reusing, inspect the product carefully. Discard any products that have cut, damaged or frayed wire insulation cords, cracks, lamp holders or enclosures, loose connections, or exposed copper wire.
4. When storing the product, carefully remove the product from wherever it is placed, including trees, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections, and wires.
5. When not in use, store neatly in a cool, dry location protected from sunlight.
6. Use all included stakes and tethers to prevent outdoor inflatable from being impacted by wind.

## **WARNING**

### **To reduce the risk of fire and electric shock:**

1. Do not install on trees having needles, leaves or branch coverings of metal or materials which look like metal, and
2. Do not mount or support wires in a manner that can cut or damage wire insulation.

**This power unit is intended to be correctly oriented in a vertical or floor mount position.**

## **WARNING**

Remove all plastic fasteners and tags. These are part of the packaging and should be discarded.

For indoor and outdoor use.

This item is not a toy. For decorative purposes only.

## **TROUBLESHOOTING CHECKLIST**

If your Outdoor Inflatable is not inflating, the problem may be:

1. The power source is disabled, or the cord may be unplugged.
2. The zipper may not be securely fastened, sealing the Outdoor Inflatable, **and preventing air from escaping.**
3. Something may be blocking the fan's air intake.

If your Outdoor Inflatable is tipping over, the problem may be:

1. Included stakes are not being utilized in all tie down points on the product.
2. Included tethers (depending on product) must be used and staked to the ground.

**NOTE: ONCE FAN IS UNPLUGGED AND STOPS BLOWING, YOUR OUTDOOR INFLATABLE WILL DEFLATE.**

The lights within the Outdoor Inflatable are powered by LED lights which are designed to operate longer than traditional bulbs. These LED lights are not replaceable.

## **WARNING**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## **CAUTION:**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## **NOTE:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limitations are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the distance between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## **CAUTION:**

1. For temporary (90 days max) installation and use only.
2. **To reduce the risk of fire or electric shock, do not attempt to** replace lamps or modify wiring or product.
3. Do not place near standing areas of water, such as ponds and pools.
4. To reduce the likelihood of excessive heat and possible damage, use only decorative lamp accessories packaged with this product or marked for use with this product.
5. To reduce the risk of fire and electric shock, use only the power supply that was provided with this product.

## **FREQUENTLY ASKED QUESTIONS (FAQ'S)**

### **1. *Can I continually run or operate my outdoor inflatable?***

Yes, you can run your outdoor inflatable during the day and at night. We recommend that you turn off your outdoor inflatable **when leaving the immediate area and when retiring for the evening**. Otherwise, your outdoor inflatable **is designed to run continually as you see fit**.

### **2. *What happens if my Outdoor Inflatable becomes torn?***

Rips in the Outdoor Inflatable **can be sewn by hand (no special thread is required)** or taped with clear packing tape.

### **3. *How can I clean my Outdoor Inflatable?***

Wipe clean with a damp cloth and allow to dry before storing away. Use mild detergent if necessary.

### **4. *When I unplug my Outdoor Inflatable, it deflates. Why is this?***

Your Outdoor Inflatable **will not stay inflated unless it is plugged in**, the fan unobstructed to blow air and the Zipper is closed.

### **5. *How much electricity does an Outdoor Inflatable consume?***

It uses about as much energy as a standard string of holiday lights.

### **6. *What is the best way to store my Outdoor Inflatable?***

Store dry in a bag, box or other storage container and keep in a cool, dry location.

## **IMPORTANT SAFETY INSTRUCTIONS**

When using electrical products, basic precautions should always be practiced including the following:

1. **READ AND FOLLOW ALL SAFETY INSTRUCTIONS.**
2. Read and follow all instructions that are on the product or provided with the product.
3. Do not use an extension cord.
4. Reference the National Electrical Code, ANSI NFPA 70, **specifically for the installation of wiring and clearances from power and lighting conductors.**
5. Installation work and electrical wiring must be **done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction.**

6. Do not install or use within 10 feet of a pool.

7. Do not use in a bathroom.

8. **WARNING: Risk of Electric Shock.** When used outdoors, install only to a covered Class A GFCI protected receptacle that is weatherproof with the power unit connected to the receptacle. If one is not provided, **contact a qualified electrician for proper installation. Ensure** that the power unit and cord do not interfere with completed closing the receptacle cover.

9. **WARNING: Risk of Fire.** Installation involves special wiring methods to run wiring through a building structure. Consult a qualified electrician.

10. **If the connector of this driver does not properly fit into the connector of the lighting string, do not modify the product and discard product if the connector is damaged.**

11. **WARNING:** Not for use with receptacles that are weatherproof only when the receptacle is covered (attachment plug cap not inserted and receptacle cover closed).

**SAVE THESE INSTRUCTIONS** – This manual contains important safety and operating instructions for power units.